

Dezactivare cont Supervisor - Inainte de expirarea termenului



Aceasta camera are presetata parola de Supervisor. Modul supervisor restrictioneaza accesul pe toate nivelele (guest / user / administrator) in termen de 30 de zile de la data livrarii. O data cu expirarea termenului, accesul pe camera va fi restrictionat chiar daca se cunosc datele de acces pentru administrare. Parola de Supervisor va fi comunicata de catre Lantec Romania la plata integrala a echipamentului. Se recomanda ca imediat dupa primirea acestei parole, contul de Supervisor sa fie dezactivat. La fel ca si in cazul contului de administrare, daca aceasta parola este pierduta, camera nu va mai putea fi accesata si va trebui trimisa la producator pentru o resetare hardware. Aceasta nu este considerata drept caz de garantie. Atasat gasiti instructiunile de dezactivare a parolei de Supervisor.

MOBOTIX M22 mx10-2-117-46 Administration Overview

- Release Notes
 - News
 - Functional Overview
- System Information
 - Hardware and Release Information
 - Camera Status
 - Temperatures
 - System Messages
 - Error Notification
- Security
 - Users and Passwords**
 - Group Access Control Lists
 - IP-Level Access Control
 - Web Server Logfile
- Page Administration
 - Page and Start Page
 - Logons
 - New Screens
- Network Setup
 - Installation
 - Current Network Configuration
 - Set Interface (for experts)
 - Port Settings (for experts)
 - File Server / Flash Device

Se apasa pe "Users and Passwords" din Admin Menu.

MOBOTIX M22 mx10-2-117-46 Users and Passwords

User	Group	Password	Confirm Password	Remark/Action
admin	admins	<input type="checkbox"/> Remove
	undefined			
Superv		<input checked="" type="checkbox"/> Activated

Scheduled access control by

Se apasa pe "Scheduled access control by".

Authentication Required

A username and password are being requested by http://192.168.100.69. The site says: "MOBOTIX Camera User"

User Name: Supervisor

Password:

OK Cancel

Se introduc datele de acces (case sensitive).
Username: Supervisor
Password: <parola furnizata de Lantec>

Supervisor Status and Password

Supervisor Activated

New Password: ... Confirm New Password: ...

Set Factory Restore Close

Se debifeaza Activated de la Supervisor Status and Password

Se apasa set pentru activare.

Supervisor Status and Password

Supervisor Activated

New Password: ... Confirm New Password: ...

Set Factory Restore Close

Se apasa close pentru memorare.

Dezactivare cont Supervisor - Dupa expirarea termenului

